



RUTLAND COUNTY  
GARDEN FURNITURE

*Hand-Crafted*

# ASSEMBLY INSTRUCTIONS

## TINWELL PICNIC TABLE AND BENCH SET

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

### PACKAGE CONTENTS

- 1 x Table top
- 2 x Seats
- 2 x Table leg frames
- 4 x Seat leg frames
- 4 x Seat leg braces
- 2 x Table leg braces
- M8 Coach screws (70mm)
- Cover caps

### TOOLS REQUIRED

- 10mm socket or spanner



TINWELL PICNIC TABLE AND BENCH SET

# TINWELL PICNIC TABLE AND BENCH SET

## Step 1



Ensure that you have all of the correct parts as listed on the front page of these instructions, including any fixings. Lay the table top upside down on a clean, flat surface, taking care not to damage it.

## Step 2



Now line up one of the table leg frames centrally on the table top as shown and secure in place using 2 coach screws through the pre-drilled holes in the fixing batten.

## Step 3



Line up one of the Table leg braces centrally on the table top.

## Step 4



Attach it to the underside of the Table top using a coach screw as shown...

# TINWELL PICNIC TABLE AND BENCH SET

## Step 5



...and secure to the Table end frame by using another coach screw through the end frame.

## Step 6



Repeat Steps 2 to 5 so that both Table ends are attached...

## Step 7



...before turning the table right side up.

## Step 8



Place one of the seat panels upside down on a clean, flat surface, taking care not to damage it.

# TINWELL PICNIC TABLE AND BENCH SET

## Step 9



Now line up one of the Seat leg frames centrally on the table top as shown and secure in place using 2 coach screws through the pre-drilled holes in the fixing batten.

## Step 10



Line up one of the Seat leg braces centrally on the Seat panel and fix in place with 2 coach screws.

## Step 11



Now repeat steps 8 - 10 for the other end of the seat unit. Build the second seat unit in the same fashion. Cover any exposed screw heads with the black plastic cover caps provided.

## Step 12



Your Tinwell picnic table and bench set is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**  
EMAIL: [INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK](mailto:INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK)  
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,  
Aslackby, Sleaford, Lincs, NG34 0HZ.  
Company No: 7670072 VAT No: 151744027