



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

BISBROOKE DISABLED ACCESS PICNIC BENCH

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

- 1 x Table Top
- 2 x Seats
- 3 x A frames
- 2 x Cross Braces
- 16 x M8 Coach Screws (70mm)
- 4 x M8 Coach Screws (60mm)
- 28 x Cover Caps

TOOLS REQUIRED

- 10mm socket or spanner



THE BISBROOKE DISABLED ACCESS PICNIC BENCH

BISBROOKE DISABLED ACCESS PICNIC BENCH

Step 1



Ensure that you have all of the correct parts as listed on the front page of these instructions, including any fixings.

Step 2



Lay the table top upside down on a clean, flat surface taking care not to damage it.

Step 3



Place one of the table A-frames centrally against the fixing batten ensuring that the gap at the table edge is the same on both sides.

Step 4



Using 2 of the supplied 70mm coach screws and the pre drilled holes, secure the table A-frame to the fixing batten on the table top.


BISBROOKE DISABLED ACCESS PICNIC BENCH

Step 5



Repeat steps 3 & 4 for the remaining 2 A-frames so that they match the image above and the centre A-frame is oriented as shown.

Step 6

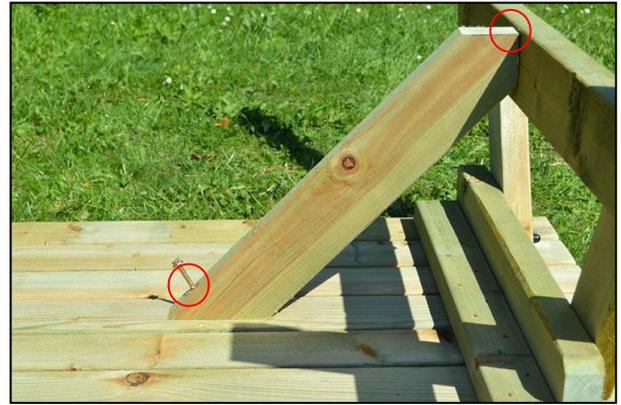

Position one of the braces as shown ensuring that it is aligned centrally along the table top and that it is flush with the A-frame before proceeding to step 7.

Step 7



Secure the brace to the A-frame using one of the 60mm coach screws and secure the other end to the table top using another 60mm coach screw as indicated in step 6.

Step 8



Repeat steps 6 & 7 for the other end of the bench so that both braces are connected.

BISBROOKE DISABLED ACCESS PICNIC BENCH

Step 9



Now turn the bench assembly right side up ready to attach the seats.

Step 10



Line up the short seat panel as shown and attach to the A-frame with 2 x 70mm coach screws in each end.

Step 11



Line up the longer seat panel in the same way as step 10 and attach to the A-frame with 2 x 70mm coach screws in each end plus a further 2 x 70mm coach screws to attach it to the central A-frame as shown above.

Step 12



Finally, cover any exposed coach screw heads with the cover caps provided. Your Bisbrooke disabled access picnic bench is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**
EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027