

ASSEMBLY INSTRUCTIONS

TINWELL PICNIC TABLE AND BENCH SET

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

1 x Table top
2 x Seats
2 x Table leg frames
4 x Seat leg frames
4 x Seat leg braces
2 x Table leg braces
12 x M8 Coach screws 70mm
12 x M8 Coach screws 60mm
26 x Cover caps

* 8ft version additionally includes - 2 x seat supports and braces, 8 x 60mm Coach screws and 8 x cover caps.

TOOLS REQUIRED

10mm socket or spanner



TINWELL PICNIC TABLE AND BENCH SET

TINWELL PICNIC TABLE AND BENCH SET

Step 1



Ensure that you have all of the correct parts as listed on the front page of these instructions, including any fixings. Lay the table top upside down on a clean, flat surface, taking care not to damage it.

Step 2




Now line up one of the table leg frames centrally on the table top as shown and secure in place using 2 70mm coach screws through the pre-drilled holes in the fixing batten.

Step 3



Line up one of the Table leg braces centrally on the table top.

Step 4

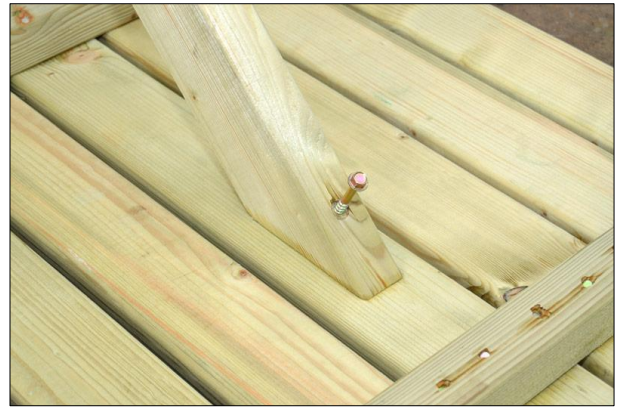

Attach it to the underside of the Table top using a 60mm coach screw as shown...

TINWELL PICNIC TABLE AND BENCH SET

Step 5



...and secure to the Table end frame by using another 60mm coach screw through the end frame.

Step 6



Repeat Steps 2 to 5 so that both Table ends are attached...

Step 7



...before turning the table right side up.

Step 8



For an 8ft model, follow Steps 8 to 11. Place one of the seat panels upside on a flat surface and place the seat support adjacent to the centre batten...

TINWELL PICNIC TABLE AND BENCH SET

Step 9



...and aligned centrally on the seat panel before fixing into place with 2 x 60mm coach screws as shown.

Step 10



Now place the brace set support brace as shown so that it is also aligned centrally...

Step 11



...before fixing into place with a 60mm coach through the brace into both the support and the underside of the seat panel. Proceed to step 12.

Step 12



Place one of the seat panels upside down on a clean, flat surface, taking care not to damage it.

TINWELL PICNIC TABLE AND BENCH SET

Step 13



Now line up one of the Seat leg frames centrally on the table top as shown and secure in place using 2 70mm coach screws through the pre-drilled holes in the fixing batten.

Step 14



Line up one of the Seat leg braces centrally on the Seat panel and fix in place with 2 60mm coach screws.

Step 15



Now repeat steps 13 & 14 for the other end of the seat unit. Build the second seat unit in the same fashion. Cover any exposed screw heads with the black plastic cover caps provided.

Step 16



Your Tinwell picnic table and bench set is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**
EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027