



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

THE EGLETON LOG STORE








 

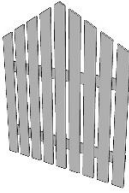
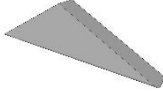 
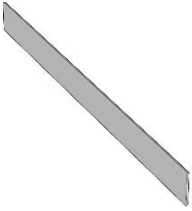

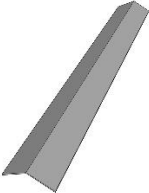
Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly procedure and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on an open flat, level surface if possible and with sufficient space.

Tools required:


No2 Pozidriv screwdriver (or electric driver).

Components

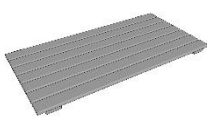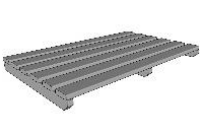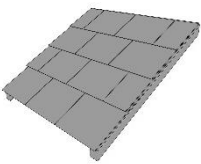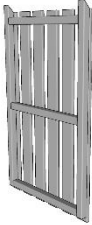32 x 40mm screws	16 x 60mm screws	6 x 100mm screws	4 x Dome head screws	1 x Shelf	1 x Base
					
2 x Roof panel	1 x Right side panel	1 x Left side panel	1 x Back panel	1 x Roof gusset	4 x Eave panels
					
2 x Framing strip	1 x Flashing strip				
					

THE EGLETON LOG STORE

Step 1

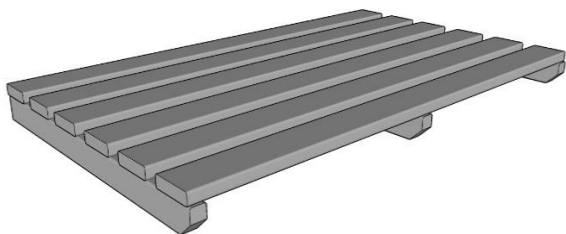


Begin by placing the base in position close to the intended final location with the chamfered supports ends facing front as shown.

Step 2



Now lower an end panel onto the base so that the outer edges are flush with the base ...

Step 3

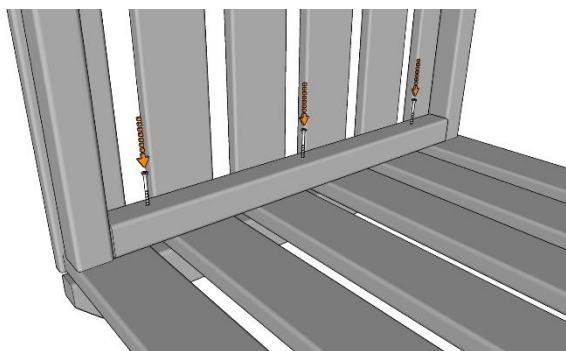

...and fix into place with 3 x 100mm screws as shown.


Step 4



Repeat with the other side panel.


THE EGLETON LOG STORE

Step 5

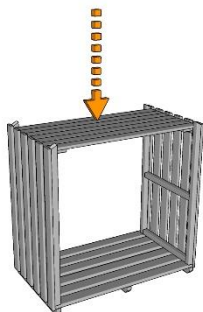


Now lower the shelf into place, gently easing the side panels apart, if necessary, until it is located on its supports as shown.

Step 6

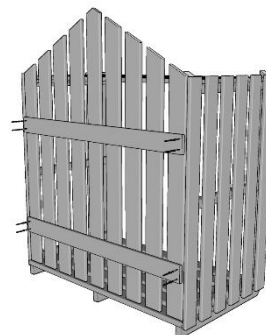


Working from behind the assembly, manoeuvre the back panel into place and secure with 2 x 60mm screws at the end of each cross support as shown.

Step 7

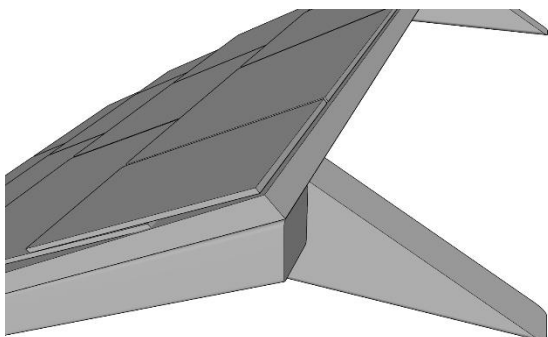

Take one of the roof panels and line up a roof gusset as shown with the apex adjacent to the edge of the roof panel and butted up against the inner edge of the roof batten...


Step 8

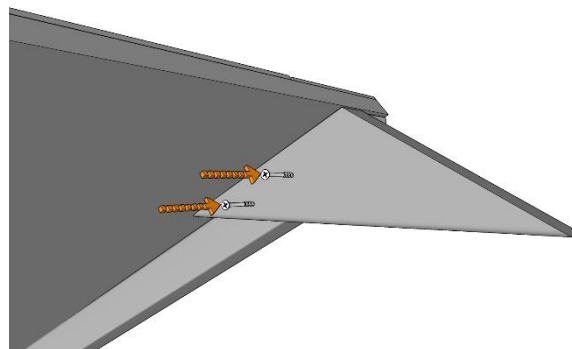

...and fix into place as shown here with 2 x 40mm screws. Add the second gusset to the other side of the roof panel in the same manner.


THE EGLETON LOG STORE

Step 9

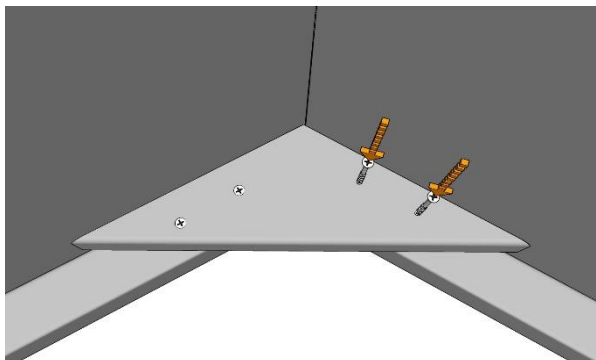


Add the second roof panel, butting it up to the first one and fix into place with another 2 x 40mm screws through each of the gussets as shown for each side.

Step 10

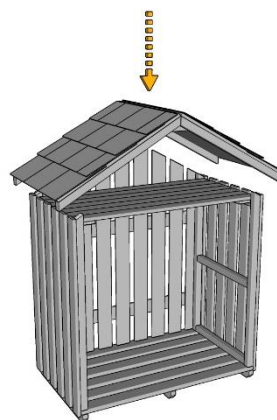


Lower the completed roof panel onto the assembly...

Step 11

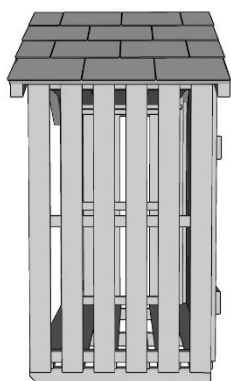

...ensuring the roof battens fit over the front and back as shown here.


Step 12

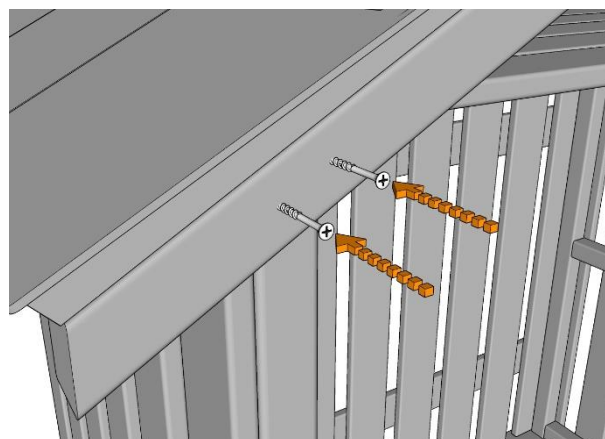

Fix the roof into place into the at each corner with 2 x 60mm screws.


THE EGLETON LOG STORE

Step 13

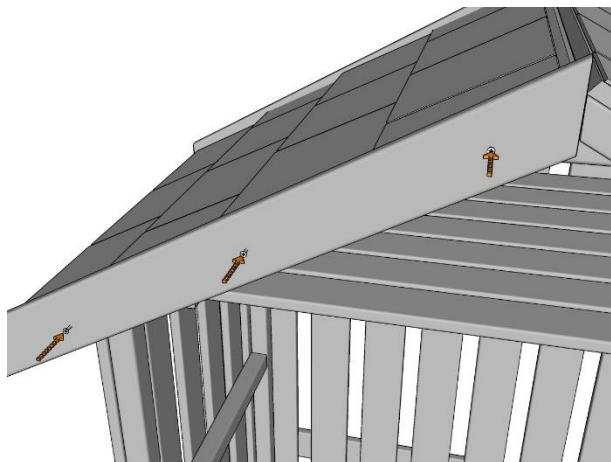


Line up an eave panel so that centremost end is aligned with the roof panel joint and the face is vertical. Fix into place with 3 x 40mm screws as shown. Repeat for the other side, making sure to butt the centre joint together. Now repeat the process on the rear of the store.

Step 14

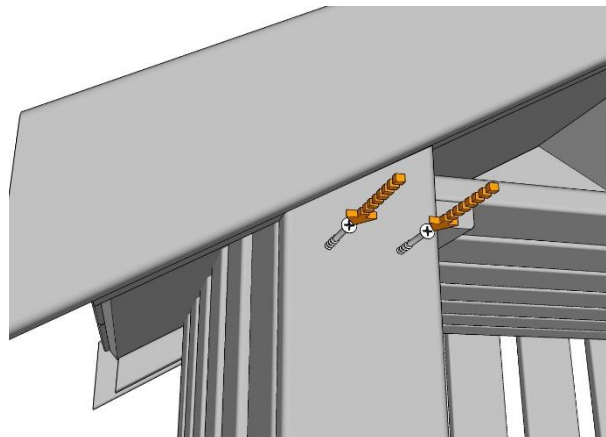


Butt the angled end of a framing strip against the underside of the roof and align its outer edge with the side panel. Fix into place with a pair of 40mm screws through the top, middle and bottom.

Step 15

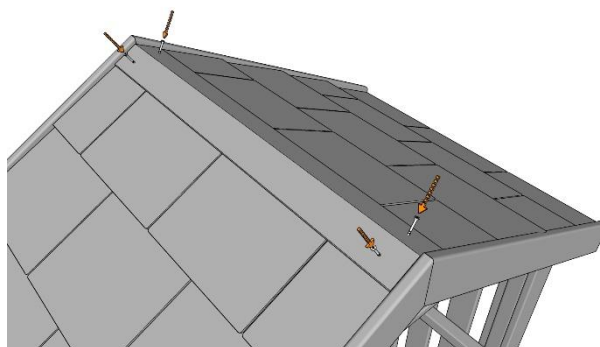

Place the flashing strip onto the apex of the roof and secure with the 4 x dome head screws as shown.

Step 16

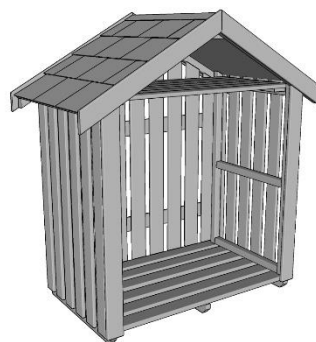

Your Egleton log store is now complete.

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us by telephone on: **01778 440803**

Email: info@rutlandcountygardenfurniture.co.uk www.rutlandcountygardenfurniture.co.uk

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 11025348 VAT No: 282569762