



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

RUTLAND SCREEN PERGOLA

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on an open flat, level surface if possible with sufficient space. You will also require the assistance of another adult to complete assembly safely.

Please note: This pergola will require anchoring into the ground to complete construction. We recommend holes in the ground filled with postfix or concrete as the best method.

PACKAGE CONTENTS

- 2 x Posts (3 for 4.2 & 4.8M version)
- 2 x Diagonal braces (4 for 4.2 & 4.8M version)
- 1 x Runners
- 4 x M8 Coach screws (8 for 4.2 & 4.8M version)
- 4 x Green woodscrews (6 for 4.2 & 4.8M version)

TOOLS REQUIRED

- 10mm socket drive
- Electric screwdriver with No2 Pozidrive bit
- Or No2 Pozidrive Screwdriver



THE RUTLAND SCREEN PERGOLA

RUTLAND SCREEN PERGOLA

Step 1




Take one of the posts and one of the runners and arrange on the floor as shown...

Step 2



...so that the notch in the post can accommodate the runner...

Step 3

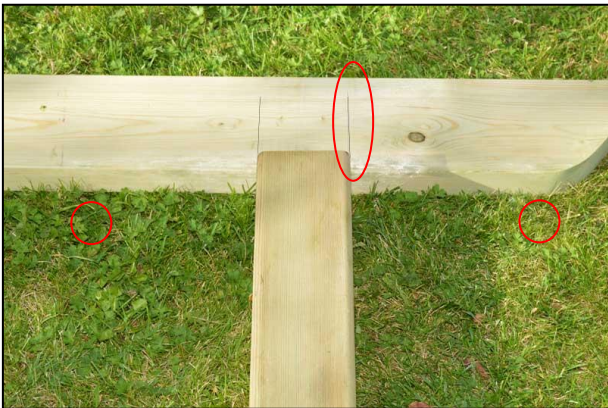

...and the post is perpendicular to the runner and its outside edge is aligned with the pencil mark near the runner's end.

Step 4



Slide the post onto the runner and fix into place using 2 of the 75mm screws through the pre-drilled holes. Then align one of the braces as shown, aligning it so that its ends are flat and also central against the runner and post.

RUTLAND SCREEN PERGOLA

Step 5



Now fix it into place using a coachscrew through the...

Step 6



...pre-drilled hole at each end of the brace.

Step 7



For a 3 post (4.2 and 4.8M) version line up the intermediate post with the mid-point pencil lines on the runner, slot into place, ensuring it is at 90° to the runner and fix in place with 2 x 75mm screws.

Step 8



Attach a brace either side of the post as before.

RUTLAND SCREEN PERGOLA

Step 9



Carefully lift the completed structure into the upright position as shown and position in its final location before securing into place.

Step 10



Your Rutland Screen Pergola is now complete.

Optional Step



Attach the optional Pedestal panels to the bottom of each post as shown. Line up each panel on the post so that it is flush with the bottom face and secure each one into place with 4 x woodscrews.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: 01778 440803

EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK

WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027