



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

TINWELL PICNIC BENCH

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

- 1 x Table top
- 2 x Seats
- 2 x Table leg frames
- 4 x Seat leg frames
- 1 x Parasol support
- 4 x Seat leg braces (not junior version)
- 2 x Table leg braces (not junior version)
- 28 x M8 Coach screws 60mm
- 12 x M8 Coach screws 70mm
- 40 Cover caps

* 8ft version additionally includes - 2 x seat supports and braces, 8 x 60mm Coach screws and 8 x cover caps.

TOOLS REQUIRED

10mm socket or spanner



TINWELL PICNIC BENCH

TINWELL PICNIC BENCH

Step 1



Ensure that you have all of the correct parts as listed on the front page of these instructions, including any fixings.

Step 2



Lay the table top upside down on a clean, flat surface taking care not to damage it. Now line up one of the table leg frames centrally on the table top as shown in step 3.

Step 3



Place one of the table leg frames centrally against the fixing batten ensuring that the gap at the table edge is the same on both sides. Now, using 2 of the supplied 70mm coach screws and the pre drilled holes, secure the table leg frame to the fixing batten on the table top.

Step 4



Using one of the supplied 70mm coach screws and the pre drilled holes, secure the table leg frame to the fixing batten on the table top...

TINWELL PICNIC BENCH

Step 5



...and secure the other side in the same fashion.
Repeat steps 2-5 for the other table leg frame.

Step 6



Now both ends are attached....

Step 7



...turn the table right side up.

Step 8



Place one of the leg braces centrally against table leg frame as shown and proceed to step 9.

TINWELL PICNIC BENCH

Step 9



Using the pencil lines on the leg brace as a guide, line up the brace in the correct position and attach it to the bottom of the table leg frame...

Step 10



...using a 60mm coach screw. Then secure the other end of the brace in the same manner.

Step 11



Now repeat steps 8 - 10 for the other end of the table until your table is as shown above.

Step 12



Insert the parasol brace into the gap between the table legs until each end is resting on the table leg frame cross brace, as shown above.

TINWELL PICNIC BENCH

Step 13



Ensure the end of the parasol brace is flush with the end frame.

Step 14



Then secure in place using 2 x 60mm coach screws in each end of the parasol brace. (For the junior/children's version proceed to Step 18)

Step 15



Position one of the table leg braces so that it is positioned as shown and also central across the parasol brace then hold it in place. (Omit this step and the next two for the junior version).

Step 16



Now look under the table and adjust the position so that this is also aligned centrally across the table centre slat.

TINWELL PICNIC BENCH

Step 17



Continue to hold the table leg brace firmly in place and attach it to both the parasol brace and table top using 60mm coach screws. Repeat the process for the other angle brace.

Step 18



Now lay one of the seat panels upside down on a flat surface as shown.

Step 19



Align one of the seat leg frames centrally across the seat panel.

Step 20



Attach the leg frame using 2 x 70mm coach screws as shown. Repeat for the other end of the seat panel then for the remaining seat panel and leg frames. (For the junior/children's version proceed to Step 28)

TINWELL PICNIC BENCH

Step 21



Place a seat leg brace in position and, as you did for the table, ensure it is centrally aligned. (Omit this step and the next two for the junior version).

Step 22



Now attach it to the seat panel and seat end frame using 60mm coach screws.

Step 23



Attach one of the seat leg braces to the other end of the seat unit and then repeat steps 19-21 for the other seat.

Step 24



For an 8ft model, follow Steps 24 to 27. Place one of the seat panels upside on a flat surface and place the seat support adjacent to the centre batten...

TINWELL PICNIC BENCH

Step 25



...and aligned centrally on the seat panel before fixing into place with 2 x 60mm coach screws as shown.

Step 26



Now place the brace set support brace as shown so that it is also aligned centrally...

Step 27



...before fixing into place with a 60mm coach through the brace into both the support and the underside of the seat panel.

Step 28



Place the completed seat units in position, ready to be secured to the main table assembly as shown.

TINWELL PICNIC BENCH

Step 29



Ensure that the edge of the seat frame is flush with the end of the leg brace...

Step 30



... and fix into place using 2 x 60mm coach screws. Repeat this for the remaining 3 seat frame ends.

Step 31



Place the black cover caps supplied over any exposed screw heads. Your Tinwell bench is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**

EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027