

# Assembly Instructions

## The Langham Minor Store


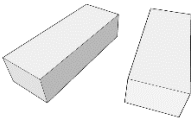
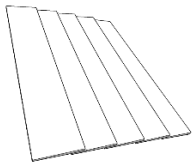
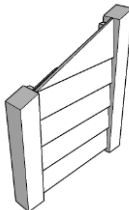
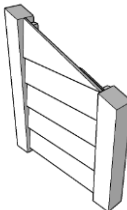
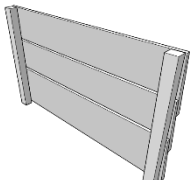
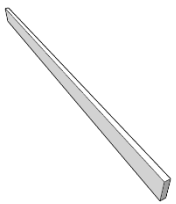
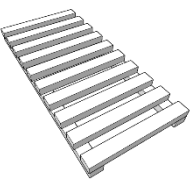
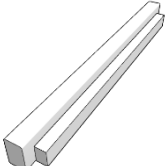


Before you commence assembly, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the procedure and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on an open flat, level surface with sufficient space.

### Tools required:


No2 Pozidriv screwdriver (or electric driver).

## Components

14 x Short screws 8 x Long screws	2 x Spacer block	1 x Roof	1 x Left panel	1 x Right panel	1 x Back panel
					
1 x Finishing strip	1 x lattice	2 x Rail	Latch keep & 10 black screws <b>Door version only</b>	1 x Door <b>Door version only</b>	
					


# The Langham Minor Store

## Step 1

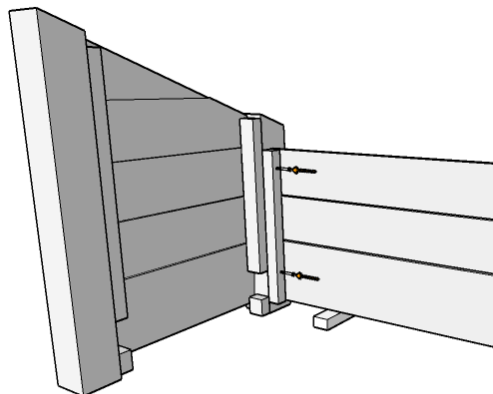


Begin by arranging the left panel and the back panel at 90° to each other, with the back panel raised up on the spacer blocks by approximately 25mm. Use 2 x shorter green screws to secure as shown.

## Step 2

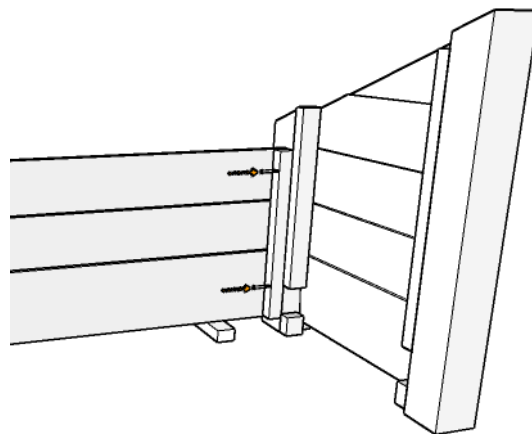


Now add the right hand panel, fixing in the same way with 2 x shorter green screws.

## Step 3

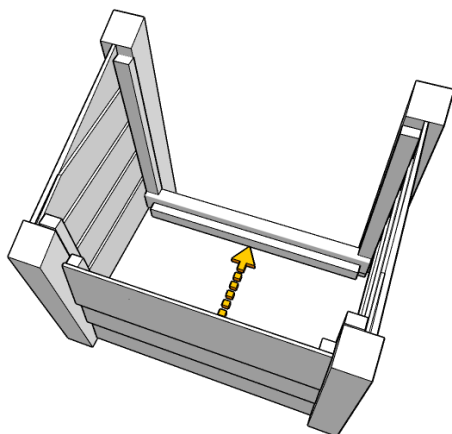

Now slide a rail, batten closest to the floor and innermost, into the slots toward the bottom of the front posts...


## Step 4

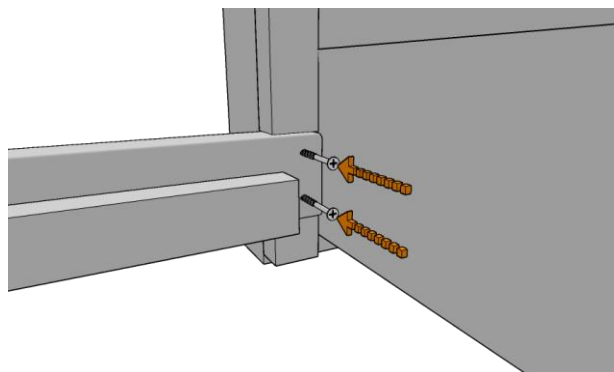

...and secure each side in place with 2 x longer green screws per side.


# The Langham Minor Store

## Step 5

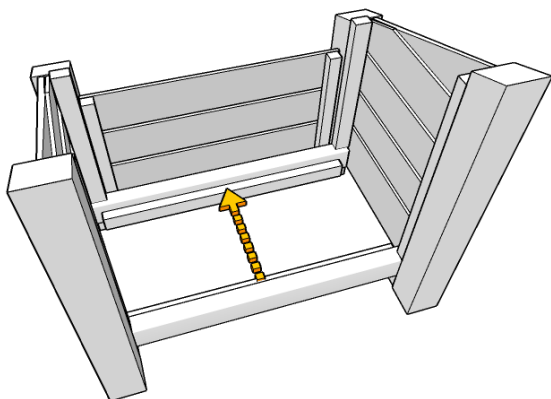


Now insert the other rail in the same manner, batten innermost, and secure each side in place with 2 x longer green screws.

## Step 6

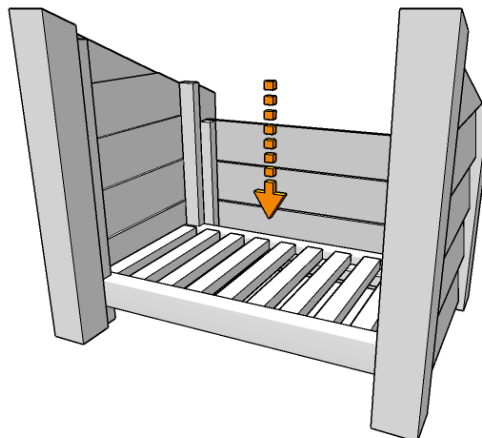


Drop the lattice into place so that it is sitting on the battens of the rails.

## Step 7

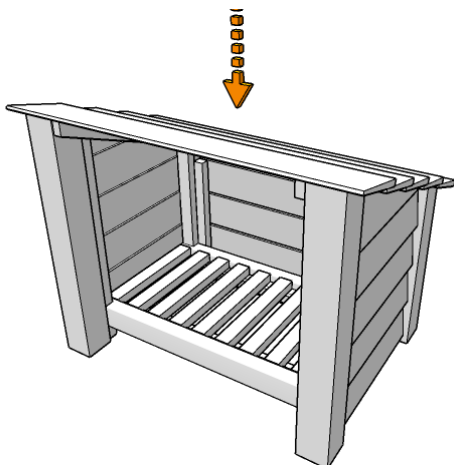

Lower the roof into place making sure that it is not back to front (check the roof battens finish flush with the outer posts).


## Step 8

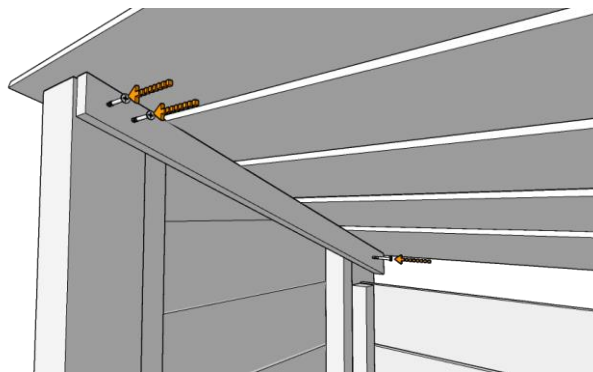

Now fix both sides of the roof into place with 2 x shorter green screws into the front post and 1 x shorter green screw into the rear post.


# The Langham Minor Store

## Step 9

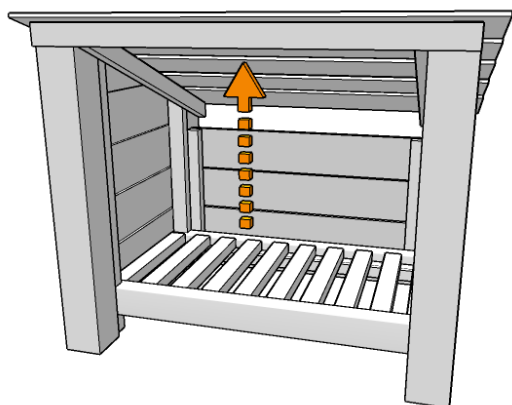


Place the finishing strip flat against the front posts so that it is centred across them. Now slide it up until it just touches the underside of the roof.

## Step 10

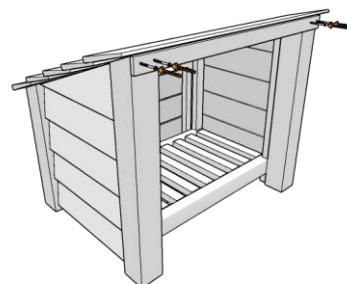


Fix the finishing strip in place with a pair of shorter green screws into each post. **Please proceed to Step 11 if your store has a door – if not, well done! Your store is now complete!**

## Step 11

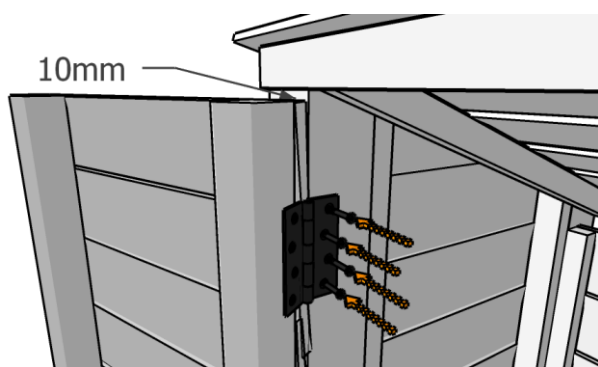

Align each door (also check it is the right way up) so that the top edge clears the underside of the finishing strip by approx 10mm and each hinge leaf sits flat against the post with the knuckles resting against the front edge of the post. Secure the hinges in place using 8 x black screws.


## Step 12

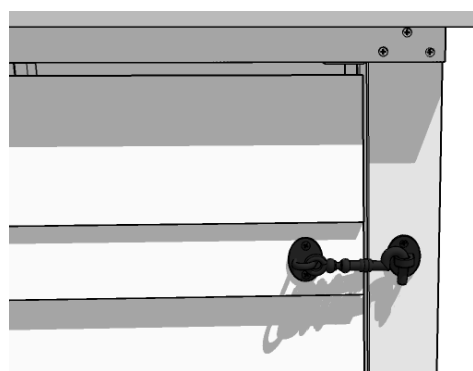

Position a cabin latch keep on the post and aligned horizontally with the latch as shown. Secure in place with 2 x black screws.

# The Langham Minor Store

## Step 13

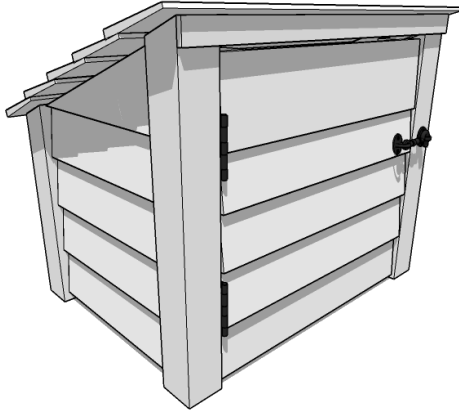

Your Langham Minor Store is now complete.

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us by telephone on: **01778 440803**

Email: [info@rutlandcountygardenfurniture.co.uk](mailto:info@rutlandcountygardenfurniture.co.uk)      [www.rutlandcountygardenfurniture.co.uk](http://www.rutlandcountygardenfurniture.co.uk)