



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

PERGOLA PRIVACY PANELS


As with all DIY projects ensure that all necessary health and safety precautions are taken such as, but not limited to, the wearing of gloves, goggles, masks and appropriate footwear – particularly if you intend to use power tools.

If for any reason you don't feel confident in completing this project, we would recommend consulting a qualified professional to undertake the work.

Tools required:

No2 Pozidriv screwdriver (an electric driver is highly recommended).


Step 1

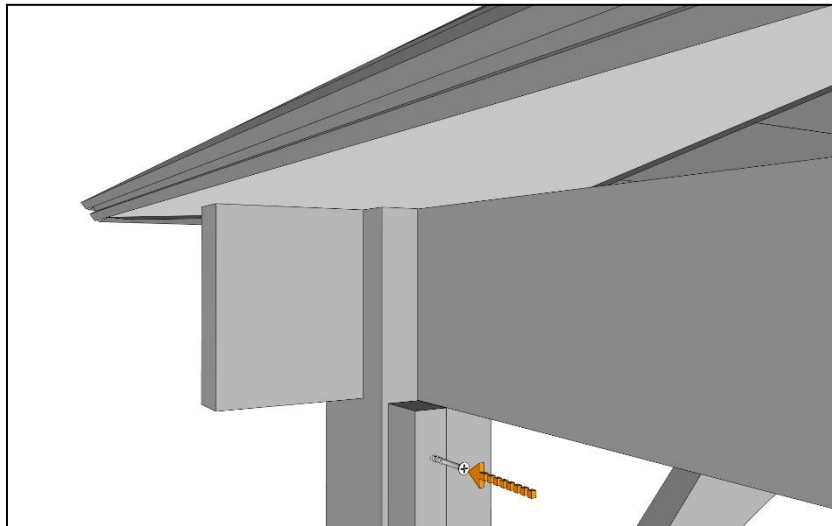

NOTE: Before adding the wall panels, it will be necessary to first remove any braces previously installed to keep the structure square during construction, where you intend to fit that wall section. On each of the wall sections prepare the posts for the cladding by adding a piece of batten, its narrower face up against and parallel to the post. The inner face of the batten should flush against the underside of the rafter/runner with about 5mm of post showing at the rear edge.


PERGOLA PRIVACY PANELS

Step 2

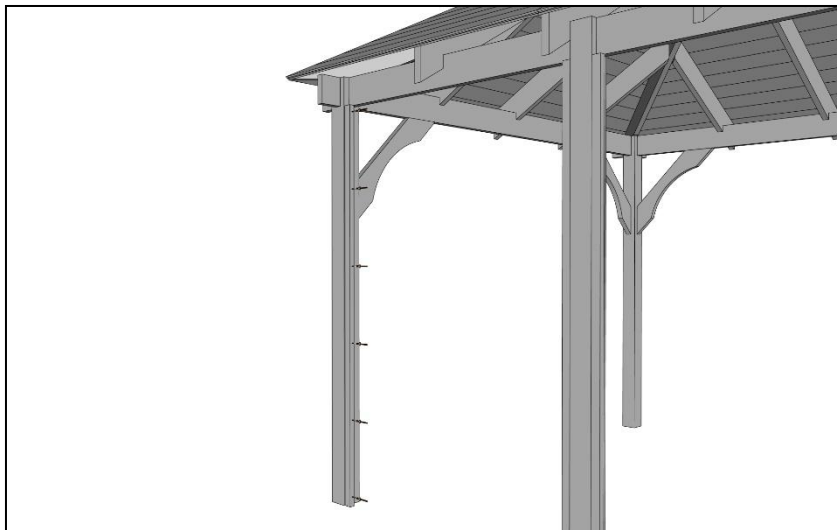

When lined up correctly, screw to the post with a 70mm screw at about 300mm intervals.


Step 3

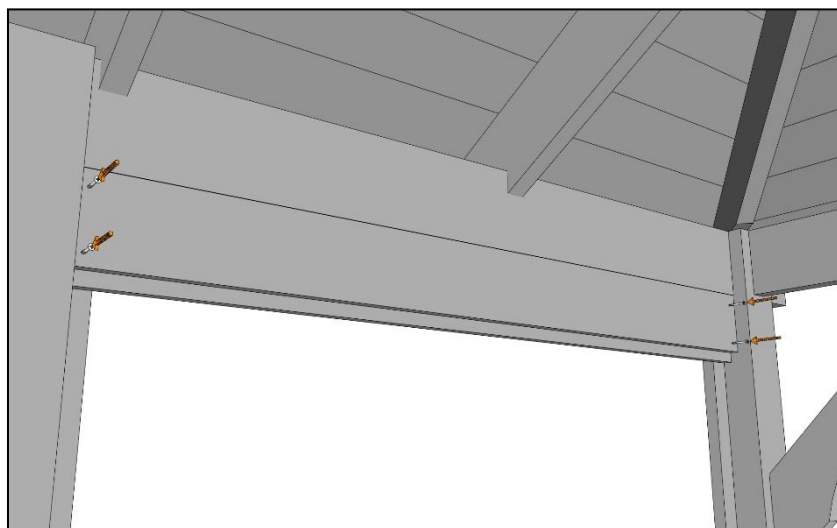

With all of the battens screwed into place, commence adding the wall cladding. Start at the top of the posts and position a bottom/top wall slat (this will only have one edge with a machined rebate) of the correct length and the rebate at the bottom and facing the interior of the pergola. Butt it up against the battens and up against the underside of the rafter/runner before fixing each end to the battens with a pair of 50mm screws.


PERGOLA PRIVACY PANELS

Step 4

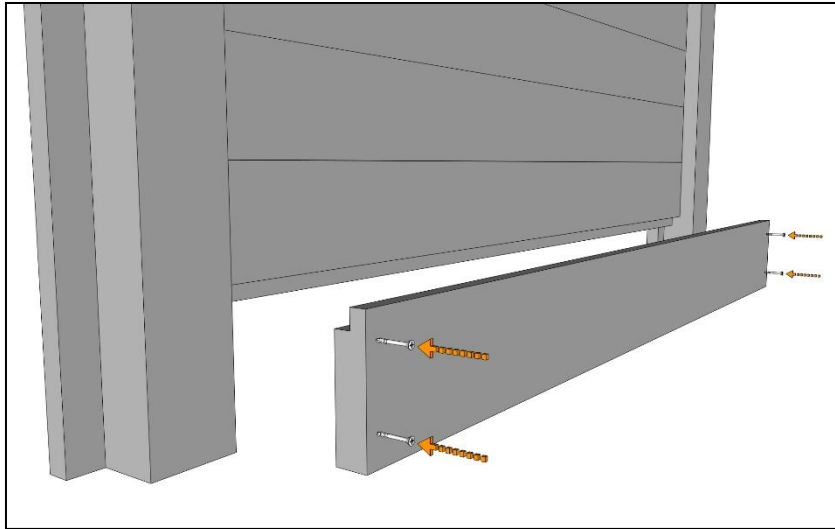

Work down the wall adding slats with a double rebate, aligning the rebates so each one slots into the previous one. Once you reach the bottom of the wall and you can add only one more slat...

Step 50

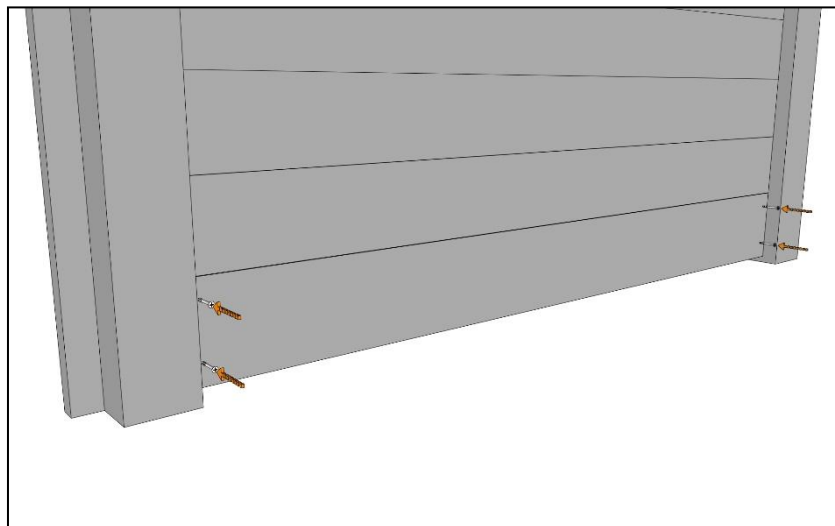

...use a bottom slat with single rebate to finish off the panel as shown here.