



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

RUTLAND WORKBENCH

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

- 1 x Bench top
- 1 x Bench shelf (2 x for shelf version)
- 2 x Leg assemblies
- 2 x Back braces
- 1 x Back panel (if ordered)
- M8 x 60mm coach screws
- 75mm screws
- 65mm screws
- 45mm screws (MDF version only)

TOOLS REQUIRED

- 10mm socket or spanner
- Electric screwdriver with No2 Pozidrive bit
Or No2 Pozidrive Screwdriver



THE RUTLAND WORKBENCH


RUTLAND WORKBENCH

Step 1




Start by placing the 2 leg assemblies, spaced approximately the length of your bench apart, facing each other, ensuring that they are correctly oriented as shown with the braces outermost and their lower end towards the front.

Step 2

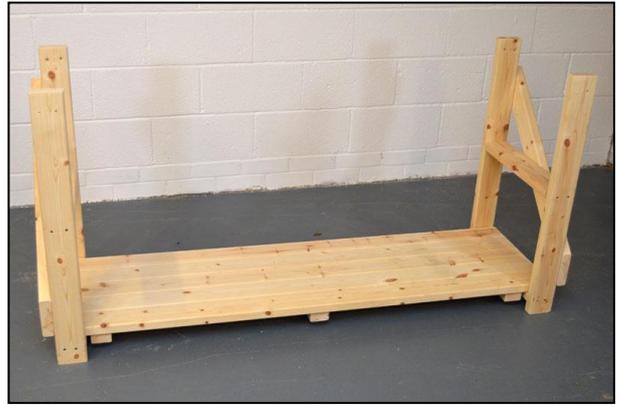

Now lower the shelf into place, resting it on the lower cross-member of each leg assembly.

Step 3

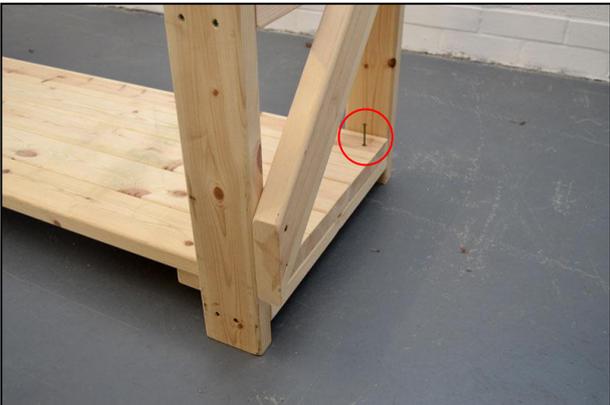

Ensure the end of the shelf is flush with the leg assembly and secure into place at the front and rear of the shelf with a 65mm screw at each corner. (45mm screw for MDF version)

Step 4



If you have a 2nd shelf, lower it into place onto the intermediate cross-member of the leg assemblies and fix into place as you did for the bottom shelf.

RUTLAND WORKBENCH

Step 5




Lower the bench top into place...

Step 6



...and working from underneath the top ensure the top of each leg is located as shown, butted against the inner edges of the top before fixing each leg into place with 2 x 60mm coach screws.

Step 7

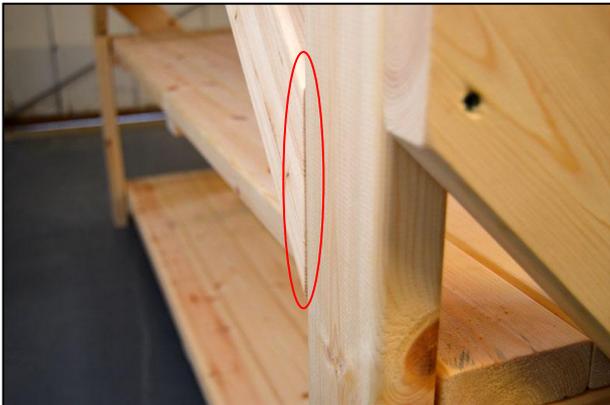

Take one of the rear braces and butt one of the 45° faces against the inner edge of the rear leg as shown ensuring it is flush with the rear face...

Step 8



...and the other end is snug against the underside of the bench top. Secure the top of the brace using 2 x 60mm coach screws...

RUTLAND WORKBENCH

Step 9



...and the lower end using a 75mm screw as shown here.

Step 10



To attach a back rest place it, resting on the rear of the work bench as shown, with each end flush with the table top ends...

Step 11



...and secure into place using 4 x 75mm screws. (45mm screws for MDF version)

Step 12



Your Rutland Workbench is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**
EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027