

Assembly Instructions

The Uppingham Log Store

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly procedure and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on an open flat, level surface if possible and with sufficient space.


Tools required:

No2 Pozidriv screwdriver (or electric driver), 10mm spanner or socket.

Components

30mm screws, 12 x 40mm screws	12 x 45mm screws, 6 x 60mm screws	10 x 70mm screws, 6 x 100mm screws	2 x Dome head screws	2 x 60mm Coach screws	1 x Shelf
			6		
1 x Base	1 x Roof	1 x Left side panel	1 x Right side panel	1 x Top rail	2 x Eave panels
2 x Framing strip	Rear panel slats	3 x Rear cross supports	1 x Flashing strip		

Step 1 Step 2

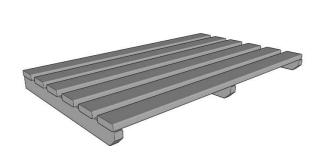




Begin by placing the base in position close to the intended final location with the chamfered supports ends facing front as shown.

Now lower an end panel onto the base, the higher end towards the rear...

Step 3

Step 4

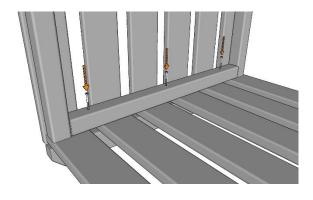




...and fix into place with 3 x 100mm screws as shown.

Repeat with the other side panel.

Step 5 Step 6



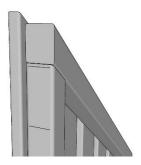


Now lower the (optional) shelf with the finishing strip facing the front into place, gently easing the side panels apart if necessary, until it is located on its supports as shown.

Working from behind the assembly locate the markings at the top of the side panels.

Step 7

Step 8

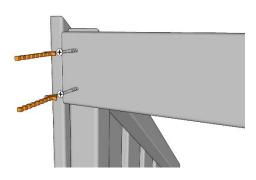





Using the marks on the side panel to position one of the 3 rear cross supports and ensuring the rear slat markings on the cross support (Step 9) are facing to the front of the store, fix each end in place with 2 x 45mm screws.

Add the 2 lower rear cross supports in the same manner.

Step 9

Step 10

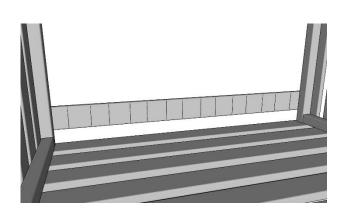

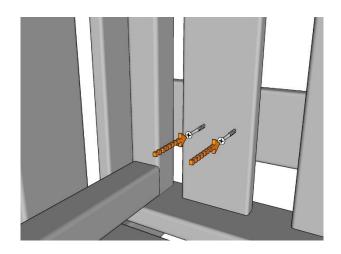



Working from the front of the assembly, locate the markings on the cross supports...


...and use them to vertically align a rear slat before fixing it into place with 2 x 30mm screws through the top, middle and bottom cross supports. Repeat for all of the rear slats.

Step 11

Step 12

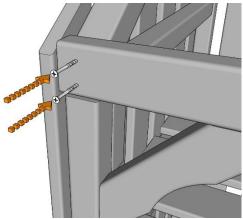


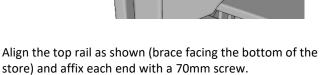

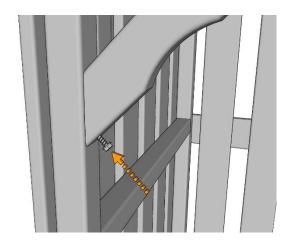


Secure the free end of the 2 braces to the side panel with a 60mm coach screw.

Step 13 Step 14

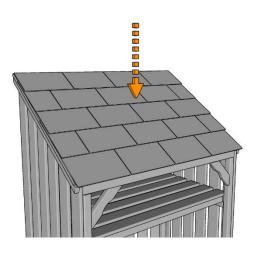


Lower the roof onto the assembly making sure that the slates are correctly oriented for water to run off and the mounting battens are flush with the rear of the side panels.

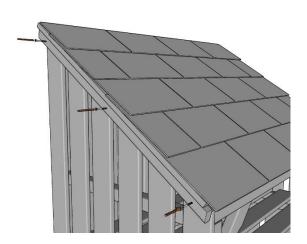


Fix each side of the roof into place with 3 x 70mm screws.

Step 15 Step 16

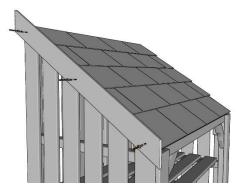


Align the eave panel and fix into place with 3 \times 60mm screws.

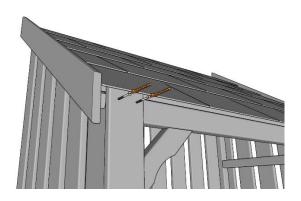

Align the framing strip so that its edge is flush with the side panel and its top edge touching the underside of the roof and fix into place with a pair of 40mm screws through the top, middle and bottom position pre-drilled holes.

Step 17 Step 18

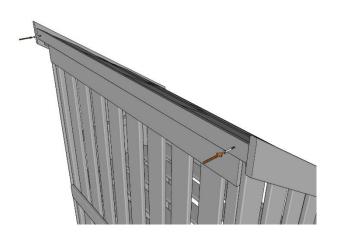



Add the flashing strip to the top edge of the roof and fix into place with the 2 x dome head screws.

Your Uppingham log store is now complete.

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us by telephone on: **01778 440803**

Email: info@rutlandcountygardenfurniture.co.uk www.rutlandcountygardenfurniture.co.uk