



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

MORCOTT WHEELIE BIN STORAGE UNIT

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

Per Unit

2 x End panels
1 x Back panel
1 x Front panel
1 x Roof
1 x Metal bar
10 x 65mm screws
2 x 75mm screws
2 x spacer blocks
160mm Coach screws (Multiple units only –
Double x 4, Triple x 8)

TOOLS REQUIRED


Electric screwdriver with No2 Pozidrive bit
Or No2 Pozidrive Screwdriver
10mm socket drive



MORCOTT WHEELIE BIN STORAGE UNIT

MORCOTT WHEELIE BIN STORAGE UNIT

Step 1

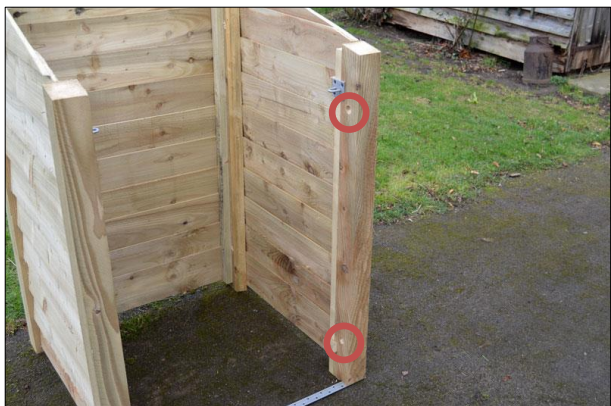

Important: Single units will have a mirror pair of side panels. A double or triple unit (shown above) will have a plain left outer end panel and a right panel with pre-drilled clearance holes as shown above.

Step 2




The right hand unit when constructing a double store will have a plain right outer end panel and battens attached to the left panel as indicated.

Step 3



The triple will have 2 x units with 2 mirror plain outer ends with pre-drilled inner panels as in Steps 1 & 4 and a centre unit with 2 end panels, each with battens on the outer edge.

Step 4

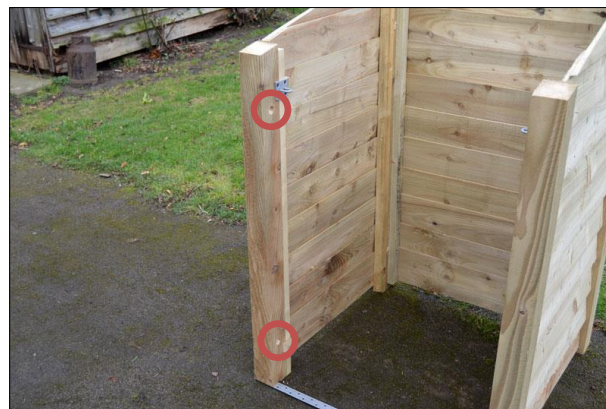

The right hand end unit for a triple store with plain out end panel and pre-drilled inner panel.


MORCOTT WHEELIE BIN STORAGE UNIT

Step 5



If you are building a combo unit with recycling storage, two of the end panels will have supports for a shelf. These should be paired together as shown above...

Step 6

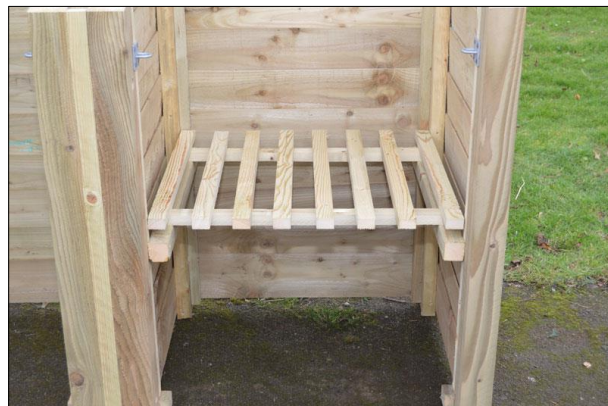

..so the shelf can be supported as shown.

Step 7



Stand the appropriate left hand end panel for the unit you are building upright on a flat, level surface.

Step 8



Arrange the 2 spacer blocks on the ground, adjacent to the end panel as shown in the photo above. Now place a back panel on the blocks, at 90° to the end panel, aligning the 2 panels ready for fixing.

MORCOTT WHEELIE BIN STORAGE UNIT

Step 9



Using the 65mm screws provided, attach the batten on the back panel to the post of the end panel, ensuring that the batten remains vertically aligned to the post.

Step 10



Now secure the appropriate right hand side panel in place with 65mm screws in the same manner as you attached the left side panel.

Step 11



Lay the assembly on its back and position the metal bar as shown across the bottom of the front posts. (Please note: The metal bar will be screwed to the side panel during packing for security and will need to be removed prior to commencing construction.)

Step 12



Keeping the metal bar flush with the edge of the post, secure it in position using 2 65mm screws and repeat for the other side.


MORCOTT WHEELIE BIN STORAGE UNIT

Step 13



Carefully lift the assembly back into the normal position. If you are building a double or triple store, repeat steps 5 to 11 before arranging the completed units in their final location, ready to be connected as shown in the following steps.

Step 14

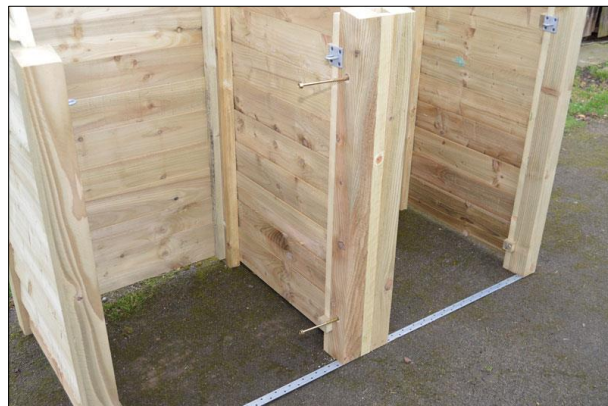

Manoeuvre 2 units into position next to each other, using an assistant if necessary in aligning the front centre posts...

Step 15



...at the top...

Step 16



...and at the bottom...

MORCOTT WHEELIE BIN STORAGE UNIT

Step 17



Now insert a 160mm coach screw into the pre-drilled hole in the upper front post and drive it fully home, pulling the 2 units together...

Step 18



...before adding another one at the bottom of the front post.

Step 19



Add the rear coach screws in the same manner as the front ones.

Step 20



For a triple store, follow steps 12 to 17 and add the remaining unit using 4 coach screws as before.

MORCOTT WHEELIE BIN STORAGE UNIT

Step 21



Place the roof section onto the store and align the rear securing batten with the edge of the rear post as shown.

Step 22



Now secure each end of the batten to the posts with an 75mm screw.

Step 23



The roof(s) can now be propped in place as shown, ready for you to hang the front door(s) using the hooks already fitted.

Step 24



Your Morcott wheelie bin storage unit is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**
EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027