



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

RUTLAND BRIDGE RANGE

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

- 1 x Centre support (where applicable)
- 2 x Rail assemblies
- Decking planks
- 65mm screws
- 12 x 85mm screws (Flat bridge only)
- 2 x End panels (Flat bridge only)

TOOLS REQUIRED

- Electric screwdriver with No2 Pozidrive bit
- Or No2 Pozidrive Screwdriver



RUTLAND BRIDGE RANGE

RUTLAND BRIDGE RANGE

Step 1



Lay the components out ready for assembly, including any fixings. (Curved Gwash model shown here)

Step 2



Stand the first side up as shown on a flat and level surface.

Step 3



Now stand the second side up opposite the first ensuring that the handrails are on the outside edges (where applicable) and that the sides are roughly spaced to the width of your decking ...

Step 4



...and placed the centre support (where supplied) between the 2 side rails...


RUTLAND BRIDGE RANGE

Step 5



...equally spaced and centralised as shown.

Step 6

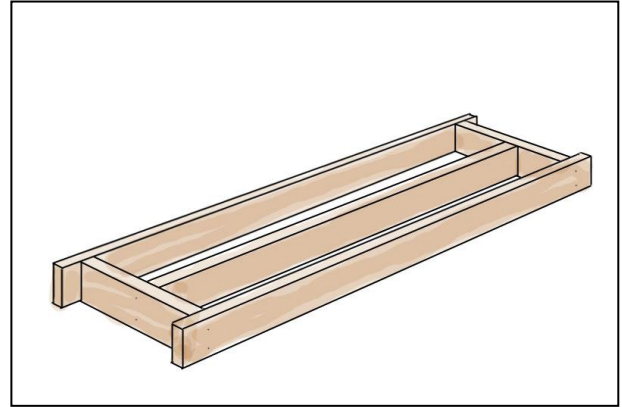

For a straight bridge arrange the shorter centre support between the longer side rails and then add the End panels as shown. secure all the parts together using 12 x 85mm screws in the predrilled holes.

Step 7



Take 2 decking pieces and place them as shown above, lining up each piece so that everything is flush with the side rail edges, square and true...

Step 8



... before proceeding to secure the first decking piece in place with 2 of the 65mm screws at one corner using the pre-drilled holes for positioning.

RUTLAND BRIDGE RANGE

Step 9



Then at the other end of the first piece...

Step 10



...and the centre support where applicable.

Step 11



Repeat for the decking piece at the other end. This piece will be removed later on, so only one screw need be used at this point.

Step 12



Now add the next 2 decking pieces, spacing them evenly using the cardboard packing pieces provided and ensuring that the edges are flush with the side rails, before securing them in place using 2 x 65mm screws at each end and through the centre support where fitted.

RUTLAND BRIDGE RANGE

Step 13



Continue across the bridge in this fashion, re-using the packing pieces as you go to ensure the decking pieces remain evenly spaced.

Step 14



When you are about 3-4 pieces from reaching the end of the bridge remove the end decking piece previously attached and continue adding the final decking pieces, spacing as you go, until the final piece is in place. Please note: A small overhang of up to 10mm may be evident when the final piece is attached.

Step 15



Your Rutland bridge is now complete. Please take care and use caution when manoeuvring it into its final location.

Step 14

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027

RUTLAND BRIDGE RANGE

FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**

EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK

WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK