



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

MORCOTT RECYCLING STORAGE UNIT

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

PACKAGE CONTENTS

- 2 x End panels
- 1 x Back panel
- 1 x Front panel
- 1 x Roof
- 1 x Metal bar
- 1 x Shelf
- 10 x 65mm screws
- 2 x 75mm screws
- 2 x spacer blocks
- Coach screws (multiple units only)

TOOLS REQUIRED

- Electric screwdriver with No2 Pozidrive bit
- Or No2 Pozidrive Screwdriver



MORCOTT WHEELIE BIN STORAGE UNIT

MORCOTT RECYCLING STORAGE UNIT

Step 1



Stand the left hand end panel upright on a flat, level surface.

Step 2



Arrange the 2 spacer blocks on the ground, adjacent to the end panel as shown in the photo above. Now place a back panel on the blocks, at 90° to the end panel, aligning the 2 panels ready for fixing.

Step 3



Using the 65mm screws provided, attach the batten on the back panel to the post of the end panel, ensuring that the batten remains vertically aligned to the post.

Step 4



Now secure the right side panel in place with 65mm screws in the same manner as you attached the left side panel.

MORCOTT RECYCLING STORAGE UNIT

Step 5



Lay the assembly on its back and position the metal bar as shown across the bottom of the front posts. (Please note: The metal bar will be screwed to the side panel during packing for security and will need to be removed prior to commencing construction.)

Step 6



Keeping the metal bar flush with the edge of the post, secure it in position using 2 65mm screws and repeat for the other side.

Step 7



Carefully lift the assembly back into the normal position.

Step 8



Place the roof section onto the store and align the rear securing batten with the edge of the rear post as shown and secure each end of the batten to the posts with an 75mm screw.


MORCOTT RECYCLING STORAGE UNIT

Step 9




The roof can now be propped in place as shown.

Step 10

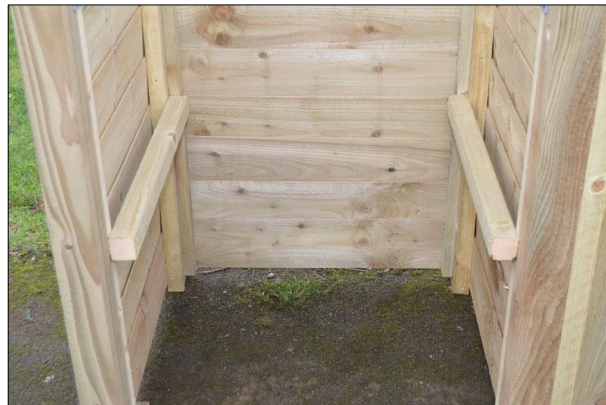

Inside the store there are 2 support battens...

Step 11

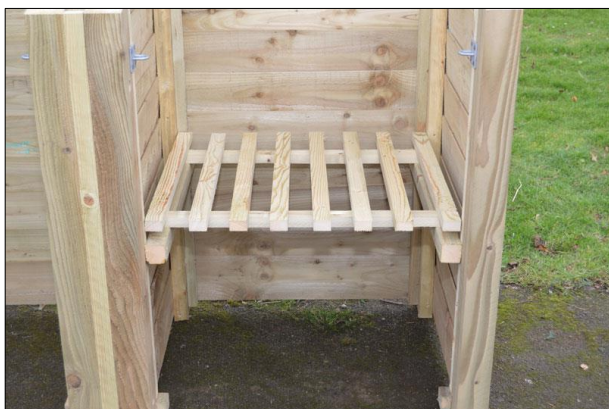

...for you to place the shelf on.

Step 12



Hang the door on the hooks and your Morcott recycling storage unit is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: **01778 440803**
EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK
WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027