



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

THE BROOKE BRIDGE

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on an open flat, level surface if possible with sufficient space.

Tools required:


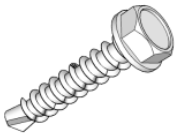
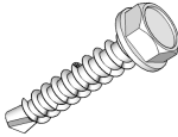
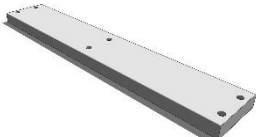

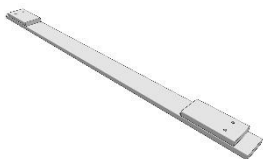
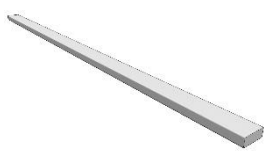
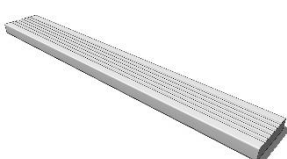
10mm socket, No2 Pozidriv screwdriver (or electric driver).



THE BROOKE BRIDGE


THE BROOKE BRIDGE

Component list

65mm woodscrews	70mm coachscrews	100mm coachscrews	End frames
			
Centre frame rail	Outer frame rails	Hand and side rails	Decking slats
			


THE BROOKE BRIDGE

Step 1

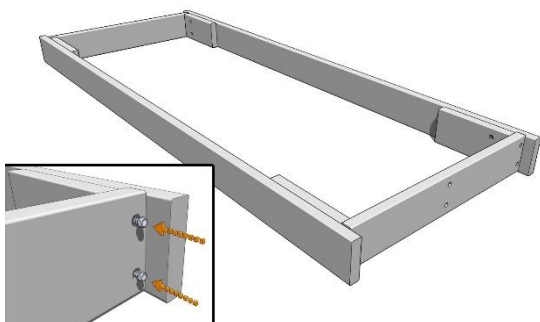


Begin by placing the two outer frame on a flat surface close to where you intend to locate your bridge. Arrange them as shown with the blocks innermost and the end frames locate in between the ends, countersinks facing out before fixing each corner in place with a pair of 70mm coach screws.

Step 2

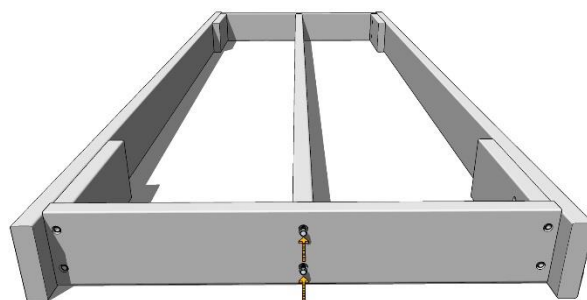


Place the centre rails between the outer frames, lining up the ends with the central countersinks of the end frames and fix in place with two 70mm coachscrews into each end.

Step 3

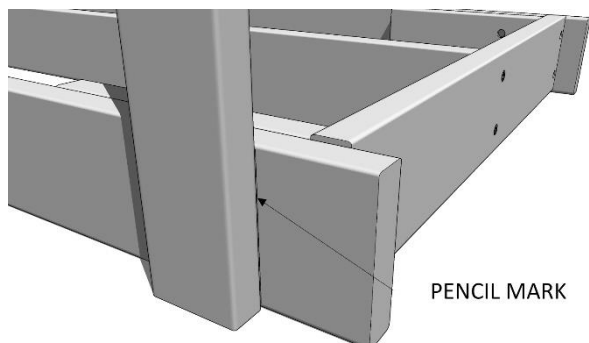

Align one of the posts so that it is aligned with the mark on the face of the outer frame...


Step 4

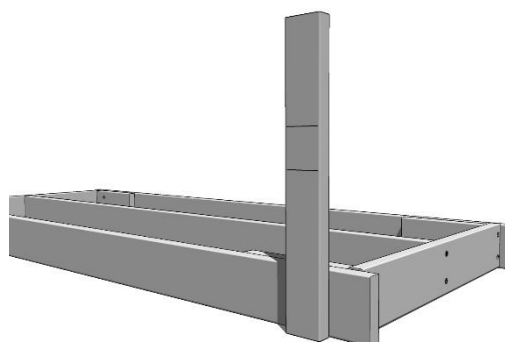

...and the markings for the centre rail are closest to the top and on the outside face.


THE BROOKE BRIDGE

Step 5

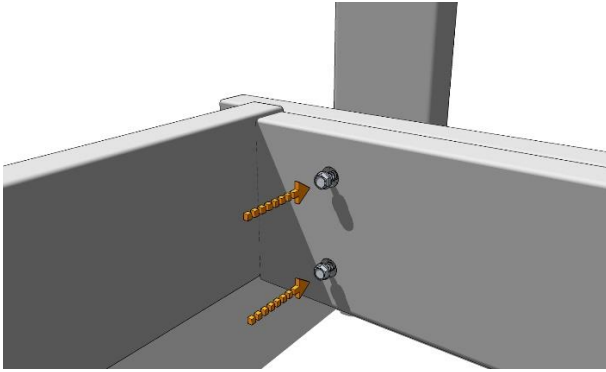


Ensure the post is vertical before securing it in place with a pair of 100mm coachscrews driven through from the frame into the post. Add the remaining posts by repeating steps 3-5.

Step 6

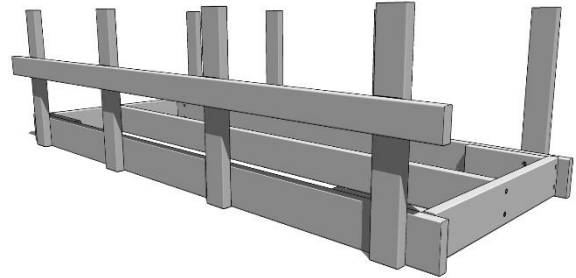


Line one of the side rails with the markings on the posts (the high rail model will have two sets of rails)...

Step 7

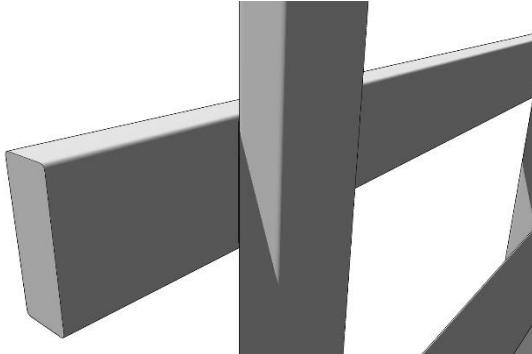

...making sure that the marks on the rail are facing towards the posts before lining the marks up...

Step 8

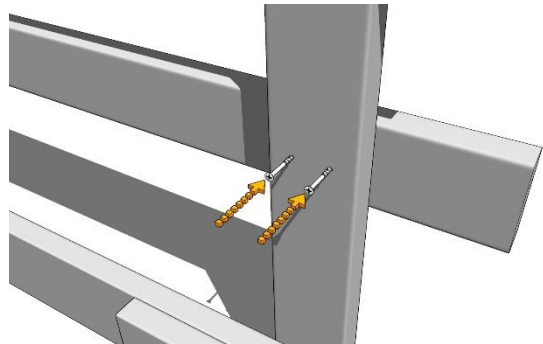

...and securing the rail in place with 2 woodscrews into each post. Attach the remaining rail(s) in the same fashion.


THE BROOKE BRIDGE

Step 9




Lay out the decking slats across the base framework and align the 2 end pieces with the ends of the frame. Now space the intermediate slats apart evenly (typically 5-10mm) and secure every slat with 2 woodscrews through each end into the frame. Run a further line of screws down the centre, omitting one at each end where the frame finishes short.

Step 10

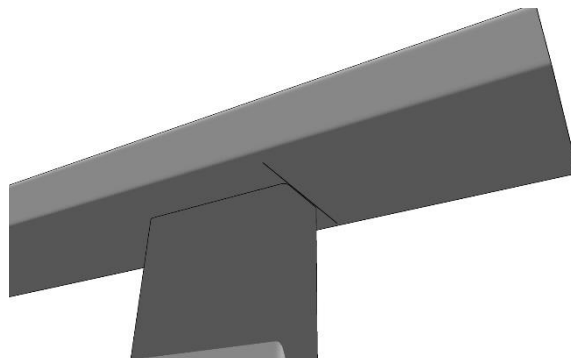


Position a handrail, laying it across the post tops so that it is centred and the markings are on the underside. Line the rail up with the mark against the post...

Step 11

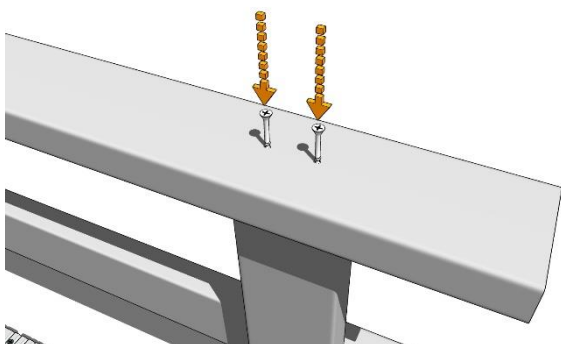

And secure the rail to each post with a pair of woodscrews driven down into the post. Add the second rail in the same manner.

Optional

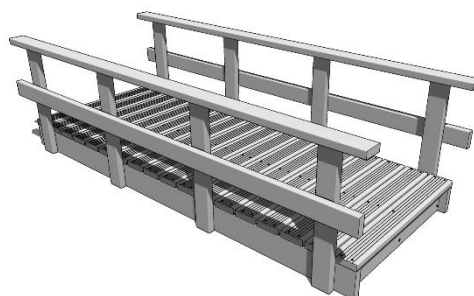

Your Brooke bridge is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: 01778 440803

EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK

WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 11025348 VAT No: 282569762