



RUTLAND COUNTY
GARDEN FURNITURE

Hand-Crafted

ASSEMBLY INSTRUCTIONS

THE BELTON BENCH

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We strongly recommend that any assembly is carried out on an open flat, level surface if possible and with sufficient space to work safely.

If for any reason you don't feel confident in completing this project, we would recommend consulting a qualified professional to undertake the work.

Tools required:




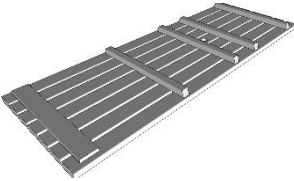
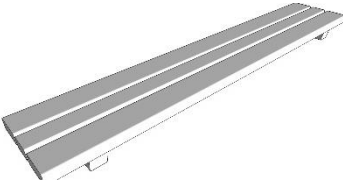


10mm socket drive or spanner



THE BELTON BENCH


THE BELTON BENCH

Component list

4 x 60mm Coachscrews	12 x 70mm Coachscrews	16 x Black cover caps
		
1 x Table Top	2 x Seat Panels	2 x A-Frames
		
2 x Braces		
		


THE BELTON BENCH

Step 1

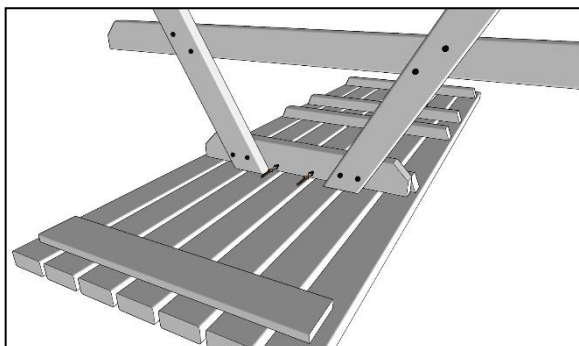


Lay the table top, upside down on a clean, flat surface taking care not to damage it. Place one of the A-frames centrally against the fixing batten ensuring that the gap at the table edge is the same on both sides. Use 2 of the 70mm coach screws, guided by the pre- drilled holes, to secure the A-frame to the fixing batten on the table top.

Step 2

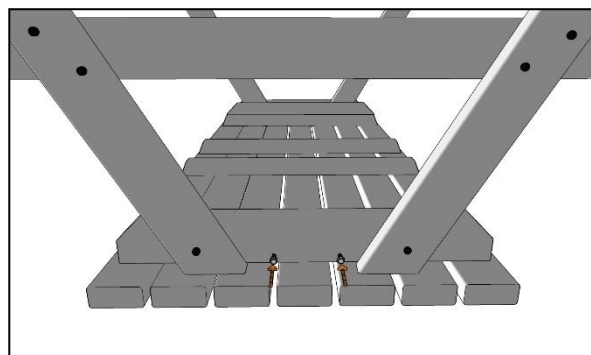


Take the second A-Frame and attach it to the table end batten in the same way.

Step 3

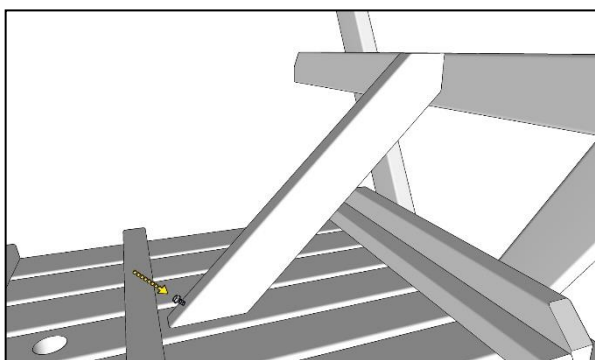

Place a brace in position as shown, ensuring that it is flush with the the table A-frame and secure it to the table top with a 60mm coach screw.


Step 4

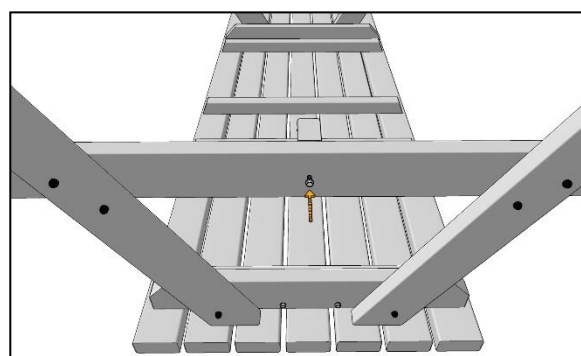

Ensure that the brace is central and secure the other end to the A-Frame with a 60mm coach screw as shown. Add the remaining brace to the other A-Frame in the same manner as shown in steps 3-4.


THE BELTON BENCH

Step 5

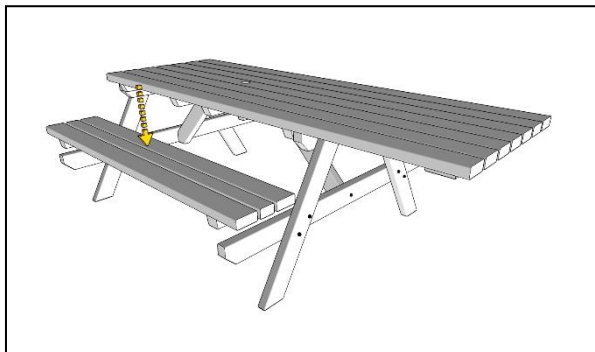


Turn the table assembly right side up and lower one of the seat panels in position as shown...

Step 6

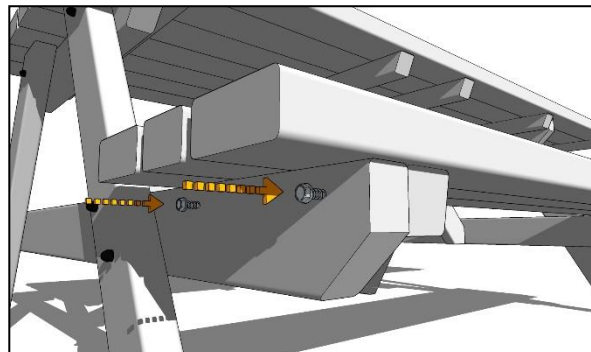

...and, after ensuring the batten ends are flush with the frame ends, secure each end of the seat panel with 2 x 70mm coach screws. Repeat with the second seat panel.

Step 7

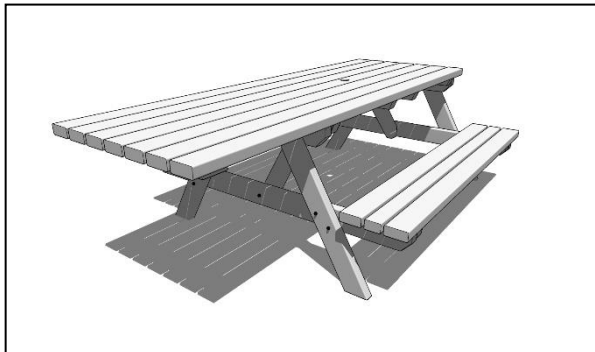

Cover any exposed screw heads with the black cover caps.
Your Bisbrooke Bench is now complete.

WE HOPE THAT YOU FOUND YOUR PRODUCT QUICK AND EASY TO ASSEMBLE BUT IF NOT AND YOU REQUIRE ANY FURTHER ASSISTANCE OR HAVE ANY QUESTIONS YOU CAN CONTACT US BY TELEPHONE ON: 01778 440803

EMAIL: INFO@RUTLANDCOUNTYGARDENFURNITURE.CO.UK

WWW.RUTLANDCOUNTYGARDENFURNITURE.CO.UK

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,
Aslackby, Sleaford, Lincs, NG34 0HZ.
Company No: 7670072 VAT No: 151744027