



RUTLAND COUNTY  
GARDEN FURNITURE

*Hand-Crafted*

# Assembly Instructions

## The Langham Major Store

Before you commence assembly, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the procedure and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on an open flat, level surface with sufficient space.

### Tools required:


No2 Pozidriv screwdriver (or electric driver).

## Components

16 x Short screws 10 x Long screws	2 x Spacer block	1 x Roof	1 x Left panel	1 x Right panel	1 x Back panel
1 x Finishing strip	1 x lattice	1 x Centre post	1 x Back rail	1 x Front rail	Latch keep & 20 black screws <b>Door version only</b>
2 x Door <b>Door version only</b>					


# The Langham Major Store

## Step 1

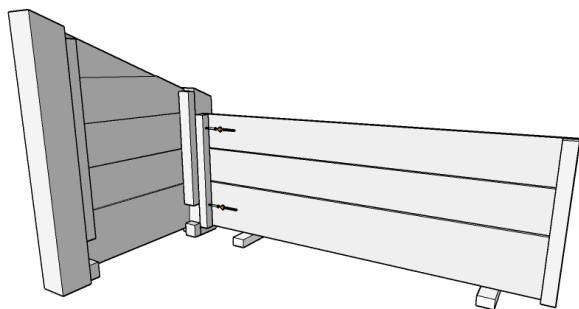


Begin by arranging the left panel and the back panel at 90° to each other, with the back panel raised up on the spacer blocks by approximately 25mm. Use 2 x Shorter green screws to secure as shown.

## Step 2

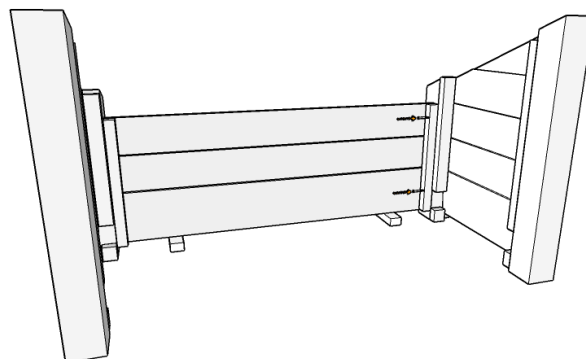


Now add the right hand panel, fixing in the same way with 2 x shorter green screws.

## Step 3

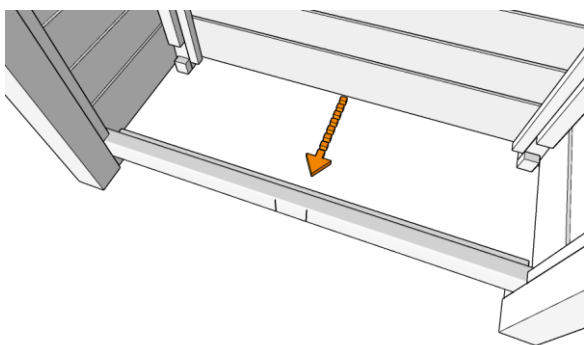

Now slide the front rail, vertical pencil marks outmost and the batten closest to the floor, into the slots toward the bottom of the front posts...


## Step 4

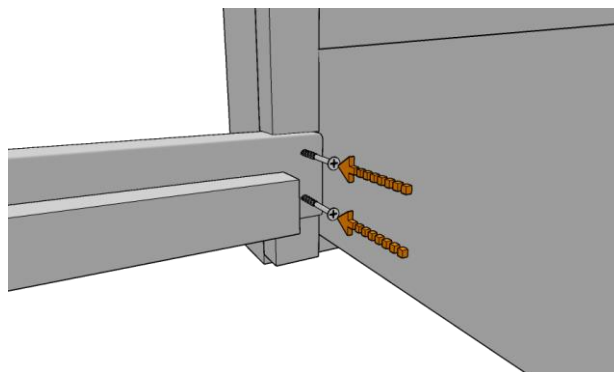

...and secure each side in place with 2 x longer green screws per side.


# The Langham Major Store

## Step 5

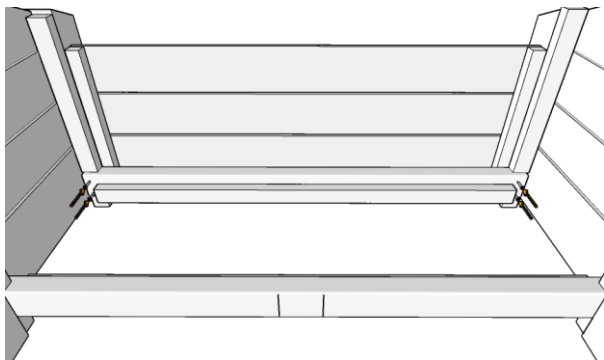


Now insert the back rail in the same manner, batten innermost, and secure each side in place with 2 x longer green screws.

## Step 6

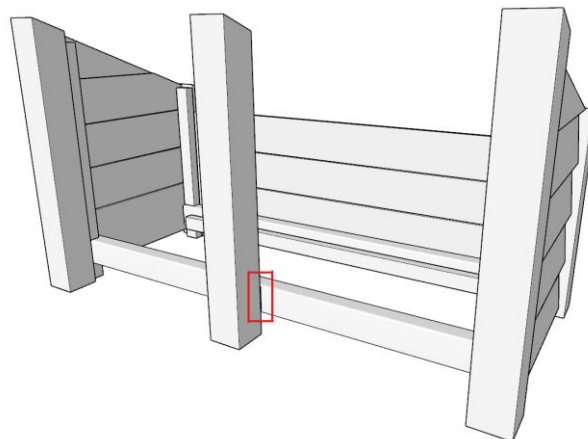


Place the centre post vertically as shown against the front rail, aligned between the pencil marks on the face of the rail.

## Step 7

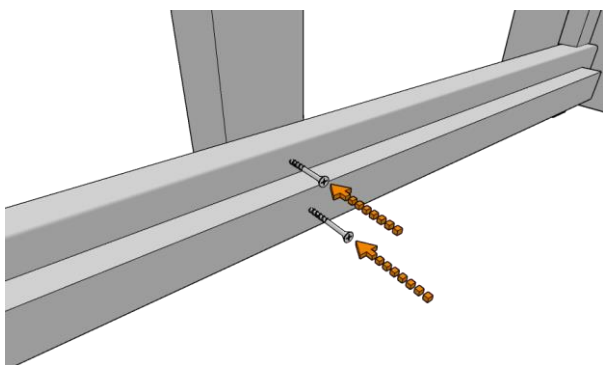

Fix the centre post in place with 2 x longer green screws driven through the front rail into the post.


## Step 8

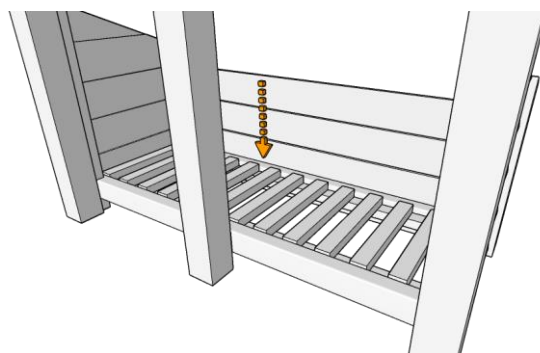

Drop the lattice into place so that it is sitting on the battens of the rails.


# The Langham Major Store

## Step 9

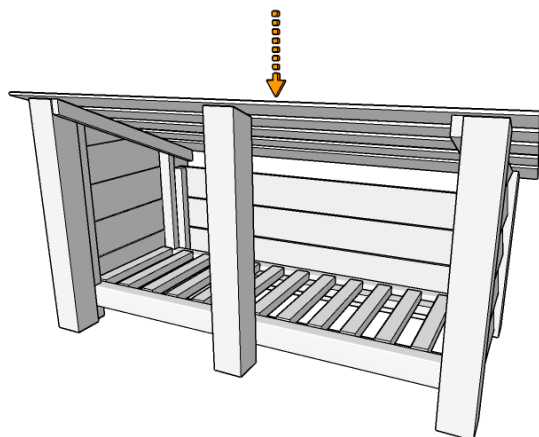


Lower the roof into place making sure that it is not back to front (check the roof battens finish flush with the outer posts).

## Step 10

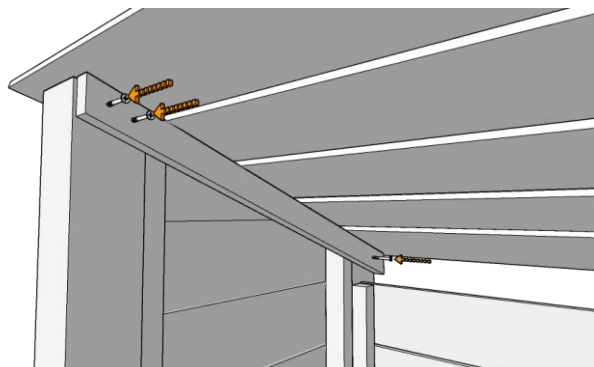


Now fix both sides of the roof into place with 2 x shorter green screws into the front post and 1 x shorter green screw into the rear post.

## Step 11

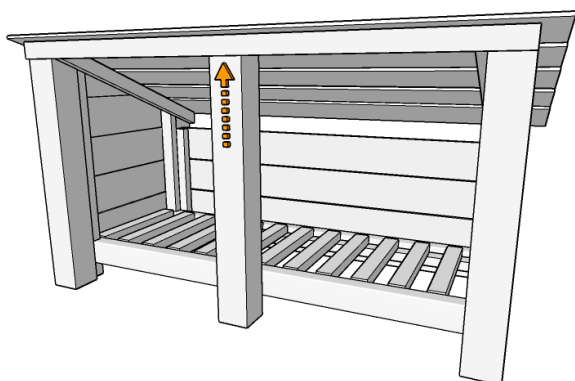

Place the finishing strip flat against the front posts so that it is centred across them. Now slide it up until it just touches the underside of the roof.


## Step 12

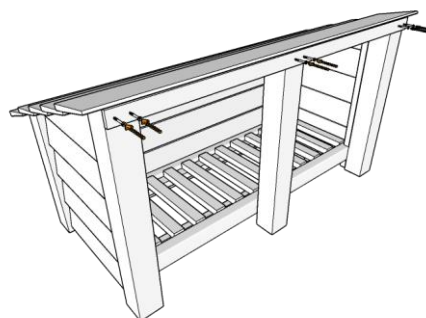

Fix the finishing strip in place with a pair of shorter green screws into each post. **Please proceed to Step 13 if your store has a door – if not, well done! Your store is now complete!**


# The Langham Major Store

## Step 13

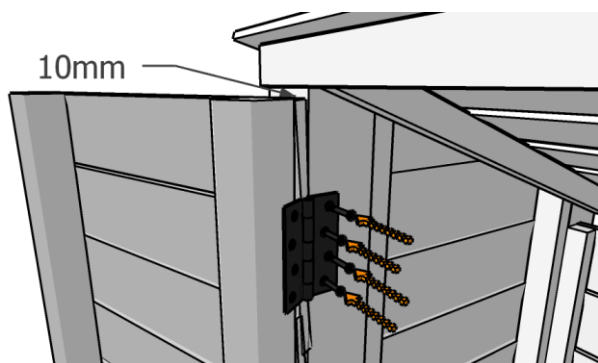


Align each door (also check it is the right way up) so that the top edge clears the underside of the finishing strip by approx 10mm and each hinge leaf sits flat against the post with the knuckles resting against the front edge of the post. Secure the hinges in place using 8 x black screws.

## Step 14

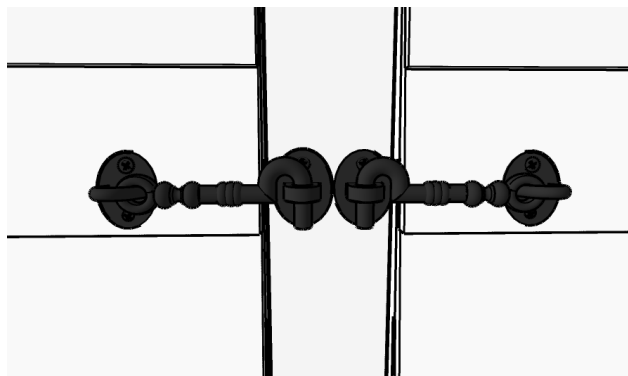

Position each cabin latch keep in turn on the post and aligned horizontally with the latch as shown. Secure in place with 2 x black screws.

## Step 15

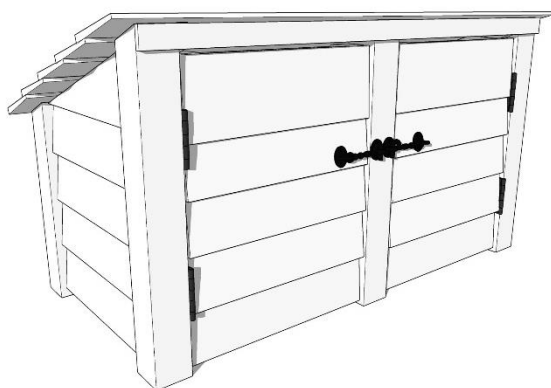

Your Langham Major Store is now complete.

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us by telephone on: **01778 440803**

Email: [info@rutlandcountygardenfurniture.co.uk](mailto:info@rutlandcountygardenfurniture.co.uk) [www.rutlandcountygardenfurniture.co.uk](http://www.rutlandcountygardenfurniture.co.uk)

Rutland County Garden Furniture Ltd, Ashbourne House, 2 Dovecote Meadows,  
Aslackby, Sleaford, Lincs, NG34 0HZ.  
Company No: 11025348 VAT No: 282569762