RUTLAND COUNTY
GARDEN FURNITURE
Hand-Crafted

Assembly Instructions

Normanton/Hambleton /Cottesmore 4/6 ft log store

Before you commence the assembly process we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the final page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

Package contents

2 x End panels
2 x Back panels
2 x Centre posts
1 x Base
1 x Lattice
1 x Roof
4ft x 28, 6ft x 34 Shorter green screws
12 x Longer green screws (For the base only)
10 x 38mm black screws (For doors only)
2 x Spacer blocks

Tools required

Electric screwdriver with No2 Pozidrive bit
Or No2 Pozidrive Screwdriver

Normanton/Hambleton/Cottesmore log store

Normanton/ Hambleton
/Cottesmore 4/6ft log store

Step 1

Ensure that you have all of the correct parts as listed on the front page of these instructions, including any fixings.

Step 2

Stand the left hand end panel (or right hand for the reversed roof version) upright on a flat, level surface.

Step 3

Arrange the 2 spacer blocks on the ground (the orientation is not critical), adjacent to the end panel as shown in the photo above. Now place a back panel on the blocks, at 90° to the end panel, aligning the 2 panels ready for fixing.

Step 4

Using the shorter green screws provided, attach the batten on the back panel to the post of the end panel, ensuring that the batten remains vertically aligned to the post.

Step 5

Align one of the longer posts (shorter for a reversed roof) with the other end of the back panel.

Step 6

Attach the panel to the post by screwing through the batten using shorter green screws as before.

Step 7

Rearrange the spacer blocks and offer up the next panel, aligning and attaching it as before.

Step 8

Remove the blocks from beneath the 2nd panel and then slide the base into position as shown, ensuring that the centre post and the central cross member of the base are aligned centrally.

Step 9

Attach the base to the end panel front post first, using 2 of the longer green screws and then secure the rear post in the same way.

Step 10

Using more of the longer screws now attach the base to the rear posts as shown.

Step 11

Slide the remaining end panel into place as shown above and attach it to the frame as you did with the first end panel with longer green screws into the front and rear posts. If you are fitting a kindling shelf, omit steps 12 -14 and attach the front posts before fitting the kindling shelf & lattice and then attaching the roof.

Step 12

Carefully place the roof on top of the log store.

Step 13

Check that the batten ends sit flush with the posts as shown. Now attach the roof to each end panel post with shorter green screws.

Step 14

Secure the rear of the roof using shorter green screws as shown.

Step 15

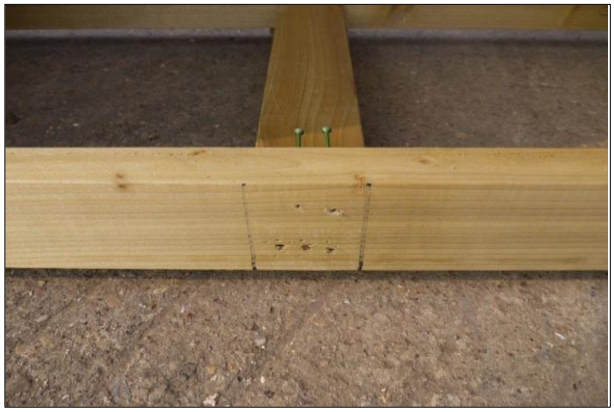

Locate the pencil guide marks on the front face of the base. This is where the centre posts will be fitted.

Step 16

Check the positioning of the post within the guide marks once again before securing the bottom of the centre post with 2 of the longer green screws

Step 17

With the centre post now attached to the base, locate the top of the post between the central roof battens, flush with the batten ends, and secure in place with 2 of the shorter green screws.

Step 18

Now fit the lattice into place by holding it with the slats in a vertical position, sliding it into the store until you have enough clearance to move it to the horizontal position and then lower it into the base as shown. Congratulations! Your log store is now complete. If you are fitting doors, please proceed with step 19

Step 19

Place a spacer block at the front of the log store adjacent to the front end post and rest the hinge side of the appropriate door on the block, aligning it vertically and horizontally for a good fit. Now use four of the supplied black hinge screws to affix the hinge to the post.

Step 20

Align the top hinge in place, ensuring that the gap between the door and post is consistent at top and bottom.

Step 21

Secure the top hinge in place using more of the black hinge screws. Repeat steps 19 - 21 for any further doors as required.

Step 22

To fit the latch keeper plates, shut the door and hold the latch in the horizontal position. Now fit the keeper and mark its correct fixing position on the centre post using a pencil or bradawl before securing it in place using the screws provided.

Step 23

The completed log store with doors.

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us by telephone on: **01778 440803**
Email: info@rutlandcountygardenfurniture.co.uk
www.rutlandcountygardenfurniture.co.uk